

REMS Curvo

Teileverzeichnis

Aktueller Stand
siehe www.rems.de

Spare parts list


Latest version
see www.rems.de

Liste des pièces

Situation actuelle
voir www.rems.de

Elenco dei pezzi

Ultimo aggiornamento
vedi www.rems.de

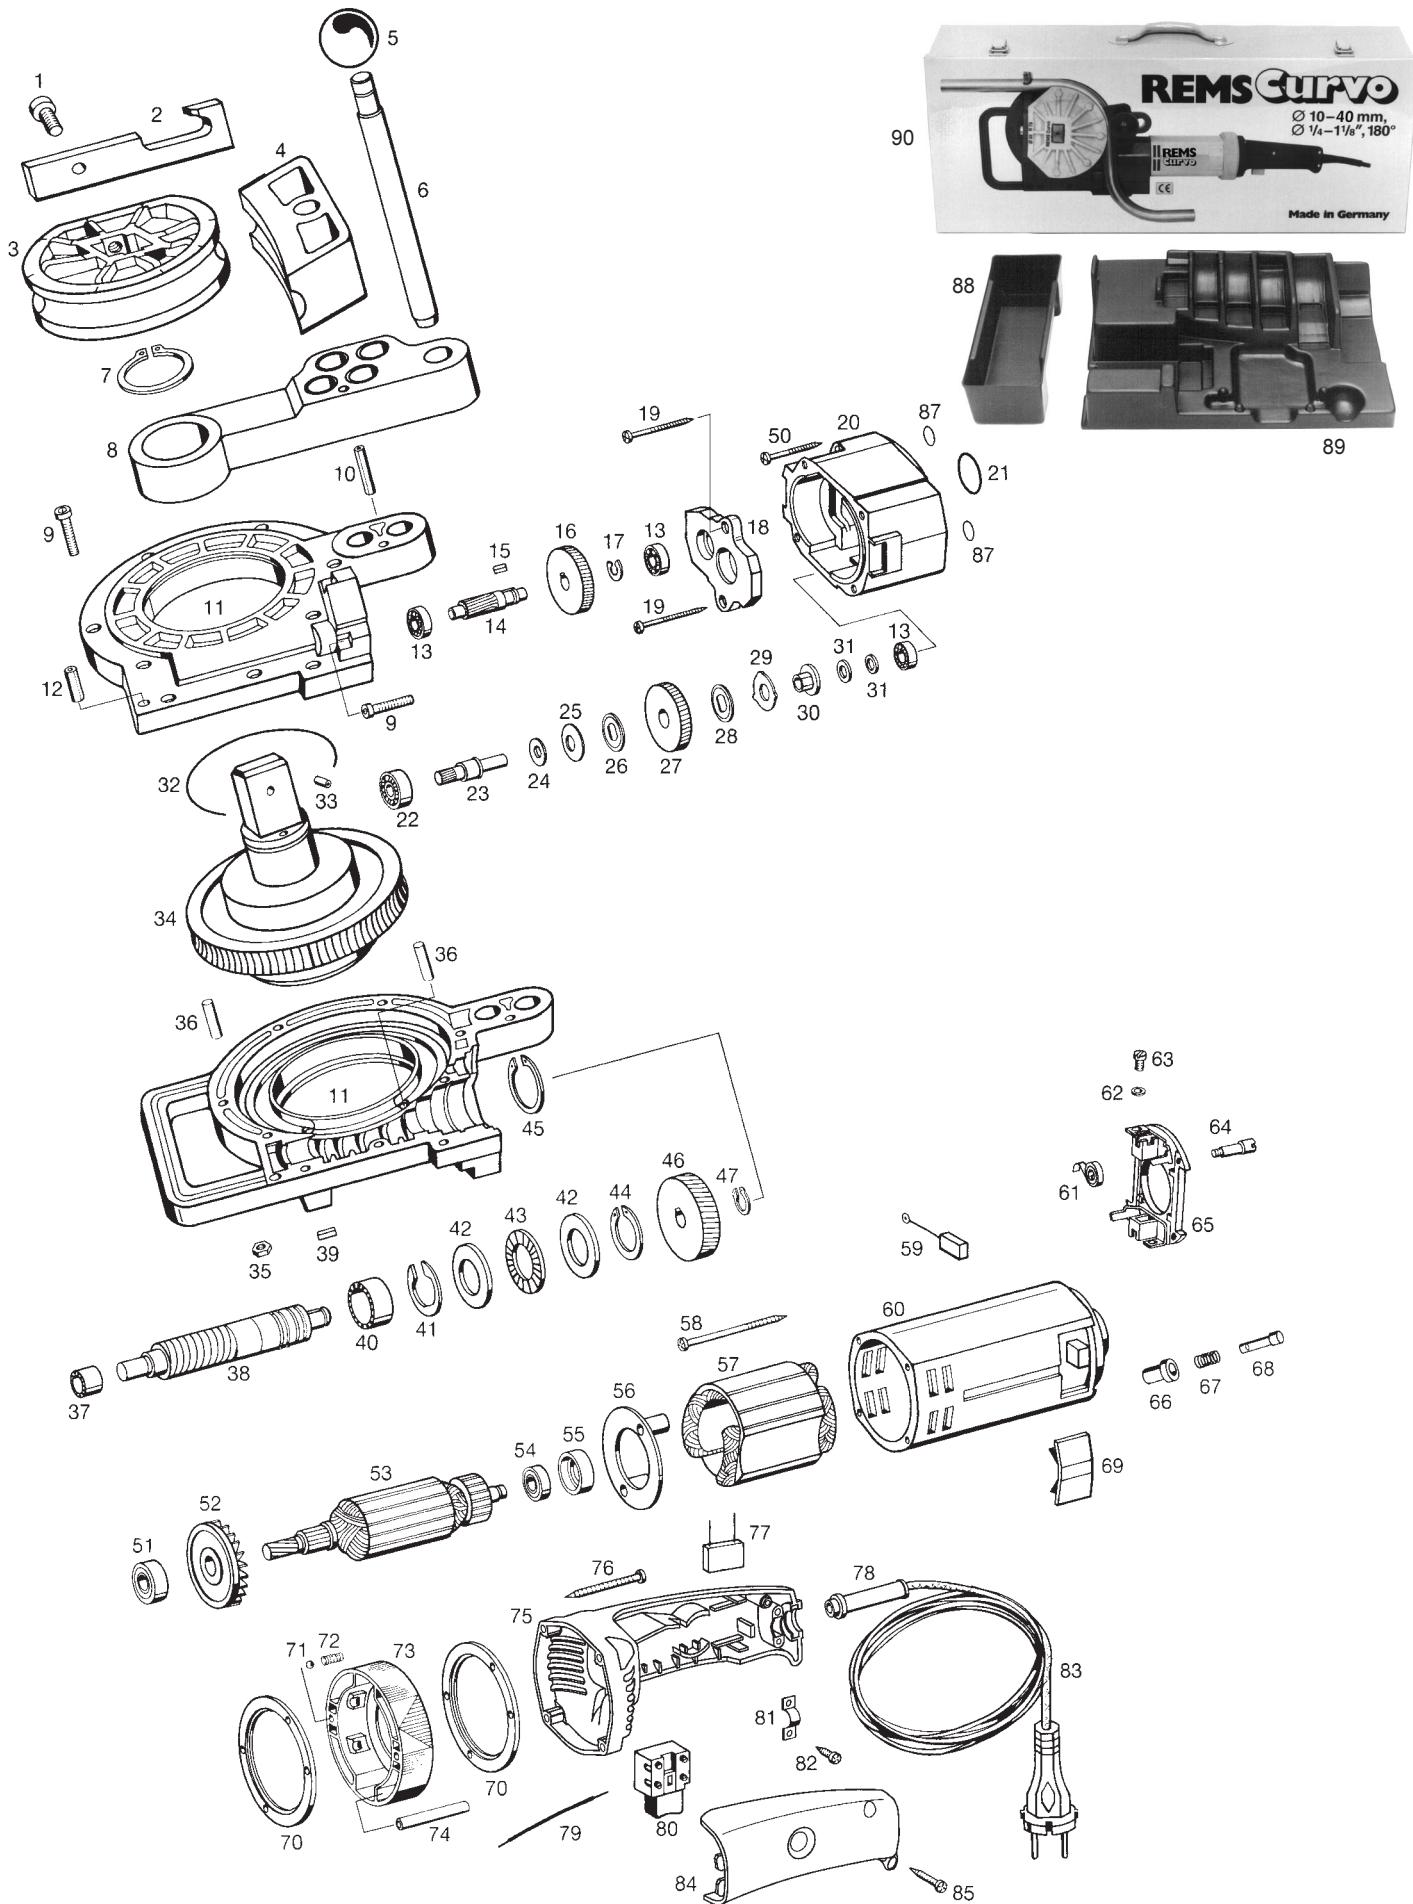

REMS Curvo

deu	eng	fra	ita
— Biegesegment + Gleitstück	Former + back former	Forme + pièce coulissante	Matrice + pezzo scorrevole
Pos. 1,2,3+4 Ø 10, R 40	Pos. 1,2,3+4 Ø 10, R 40	Pos. 1,2,3+4 Ø 10, R 40	Pos. 1,2,3+4 Ø 10, R 40
Ø 12, R 45	Ø 12, R 45	Ø 12, R 45	Ø 12, R 45
Ø 14, R 50	Ø 14, R 50	Ø 14, R 50	Ø 14, R 50
Ø 15, R 55	Ø 15, R 55	Ø 15, R 55	Ø 15, R 55
Ø 16, R 60	Ø 16, R 60	Ø 16, R 60	Ø 16, R 60
Ø 17, R 56	Ø 17, R 56	Ø 17, R 56	Ø 17, R 56
Ø 18, R 70	Ø 18, R 70	Ø 18, R 70	Ø 18, R 70
Ø 20, R 75	Ø 20, R 75	Ø 20, R 75	Ø 20, R 75
Ø 22, R 77	Ø 22, R 77	Ø 22, R 77	Ø 22, R 77
Ø 22, R 88	Ø 22, R 88	Ø 22, R 88	Ø 22, R 88
Ø 24, R 75	Ø 24, R 75	Ø 24, R 75	Ø 24, R 75
Ø 25, R 98	Ø 25, R 98	Ø 25, R 98	Ø 25, R 98
Ø 26, R 98	Ø 26, R 98	Ø 26, R 98	Ø 26, R 98
Ø 28, R 102	Ø 28, R 102	Ø 28, R 102	Ø 28, R 102
Ø 28, R 114	Ø 28, R 114	Ø 28, R 114	Ø 28, R 114
Ø 30, R 98	Ø 30, R 98	Ø 30, R 98	Ø 30, R 98
Ø 32, R 98	Ø 32, R 98	Ø 32, R 98	Ø 32, R 98
Ø 32, R 114	Ø 32, R 114	Ø 32, R 114	Ø 32, R 114
Ø 35, R 140	Ø 35, R 140	Ø 35, R 140	Ø 35, R 140
Ø 40, R 140	Ø 40, R 140	Ø 40, R 140	Ø 40, R 140
Ø 3/8", R 43	Ø 3/8", R 43	Ø 3/8", R 43	Ø 3/8", R 43
Ø 1/2", R 52	Ø 1/2", R 52	Ø 1/2", R 52	Ø 1/2", R 52
Ø 5/8", R 63	Ø 5/8", R 63	Ø 5/8", R 63	Ø 5/8", R 63
Ø 3/4", R 75	Ø 3/4", R 75	Ø 3/4", R 75	Ø 3/4", R 75
Ø 7/8", R 98	Ø 7/8", R 98	Ø 7/8", R 98	Ø 7/8", R 98
Ø 1", R 98	Ø 1", R 98	Ø 1", R 98	Ø 1", R 98
Ø 1 1/8", R 102	Ø 1 1/8", R 102	Ø 1 1/8", R 102	Ø 1 1/8", R 102
Ø 1 1/4", R 114	Ø 1 1/4", R 114	Ø 1 1/4", R 114	Ø 1 1/4", R 114
Ø 1 3/8", R 140	Ø 1 3/8", R 140	Ø 1 3/8", R 140	Ø 1 3/8", R 140
4 Gleitstück	Ø 10, R 40	Back former	Pièce coulissante
	Ø 12, R 45	Ø 12, R 45	Ø 10, R 40
	Ø 14, R 50	Ø 14, R 50	Ø 12, R 45
	Ø 15, R 55	Ø 15, R 55	Ø 14, R 50
	Ø 16, R 60	Ø 16, R 60	Ø 15, R 55
	Ø 17, R 56	Ø 17, R 56	Ø 16, R 60
	Ø 18, R 70	Ø 18, R 70	Ø 17, R 56
	Ø 20, R 75	Ø 20, R 75	Ø 18, R 70
	Ø 22, R 77	Ø 22, R 77	Ø 20, R 75
	Ø 22, R 88	Ø 22, R 88	Ø 22, R 77
	Ø 24, R 75	Ø 24, R 75	Ø 22, R 88
	Ø 25, R 98	Ø 25, R 98	Ø 24, R 75
	Ø 26, R 98	Ø 26, R 98	Ø 25, R 98
	Ø 28, R 102	Ø 28, R 102	Ø 26, R 98
	Ø 28, R 114	Ø 28, R 114	Ø 28, R 102
	Ø 30, R 98	Ø 30, R 98	Ø 28, R 114
	Ø 32, R 98	Ø 32, R 98	Ø 28, R 114
	Ø 32, R 114	Ø 32, R 114	Ø 30, R 98
	Ø 35, R 140	Ø 35, R 140	Ø 32, R 98
	Ø 40, R 140	Ø 40, R 140	Ø 32, R 114
	Ø 3/8", R 43	Ø 3/8", R 43	Ø 35, R 140
	Ø 1/2", R 52	Ø 1/2", R 52	Ø 40, R 140
	Ø 5/8", R 63	Ø 5/8", R 63	Ø 3/8", R 43
	Ø 3/4", R 75	Ø 3/4", R 75	Ø 1/2", R 52
	Ø 7/8", R 98	Ø 7/8", R 98	Ø 5/8", R 63
	Ø 1", R 98	Ø 1", R 98	Ø 3/4", R 75
	Ø 1 1/8", R 102	Ø 1 1/8", R 102	Ø 7/8", R 98
	Ø 1 1/4", R 114	Ø 1 1/4", R 114	Ø 1", R 98
	Ø 1 3/8", R 140	Ø 1 3/8", R 140	Ø 1 1/8", R 102
5 Kugelknopf	Knob	Bouton sphérique	Pomello
— Steckbolzen mont.	Socket pin mount.	Axe débrochable mont.	Bullone a inniesto mont.
Pos. 5 und 6	Pos. 5 and 6	Pos. 5 and 6	Pos 5 e 6
7 Sicherungsring	Locking ring	Circlip	Anello di sicurezza
8 Universalabstützung	Support universal	Support universel	Supporto universale
9 Zylinderschraube	Fillister head screw	Vis à tête cylindrique	Vite a testa cilindrica
10 Spiralspannstift	Spiral pin	Goupille spiralée	Spina elastica
11 Getriebegehäuse	Gear housing	Boîte d'engrenage	Scatola degli ingranaggi
12 Spiralspannstift	Spiral pin	Goupille spiralée	Spina elastica
13 Rillenkugellager	Grooved ball bearing	Roulement à billes	Cuscinetto a sfere
14 Ritzel	Pinion	Pignon	Pignone
15 Paßfeder	Key	Clavette	Chiavetta
16 Stirnrad	Wheel	Roue droite	Ruota dentata cilindrica
17 Sicherungsscheibe	Locking washer	Rondelle de sécurité	Ranella di sicurezza
18 Lagerplatte	Bearing plate	Plaque d'appui	Piastre di supporto
19 Blechschraube	Sheet metal screw	Vis à tôle	Vite da lamiera
20 Zwischengehäuse	Intermediate housing	Carcase intermediaire	Carcasa intermedia
21 O-Ring	O-ring	Joint torique	Guarnizione O-Ring
— Ritzelwelle	Pinion shaft	Arbre pignon	Albero pignone
mit Rutschkupplung	with safety clutch	avec embrayage sécurité	a innest. sicurezza
Pos. 22–31 und 13	Pos. 22–31 and 13	Pos. 22–31 et 13	Pos. 22–31 e 13
32 O-Ring	O-ring	Joint torique	Guarnizione O-Ring
33 Spannhülse	Adaptor sleeve	Douille de serrage	Spina elastica
34 Spindelrad	Spindle wheel	Roue d'arbre	Ruota albero
35 Sechskantmutter	Hexagon nut	Ecrou hexagonal	Dado esagonale

REMS Curvo

deu	eng	fra	ita	
36 Zylinderstift	Straight pin	Tige cylindrique	Spina cilindrica	088061
37 Nadelhülse	Needle bushing	Douille à aiguilles	Astuccio a rullini	057067
38 Schneckenwelle	Worm	Vis sans fin	Vite senza fina	850004 R
39 Paßfeder	Key	Clavette	Chiavetta	582039
40 Nadelhülse	Needle bushing	Douille à aiguilles	Astuccio a rullini	057102
41 Sicherungsscheibe	Locking washer	Rondelle de sécurité	Ranella di sicurezza	059077
42 Laufscheibe	Washer	Rondelle	Ranella	057104
43 Axial-Nadelkranz	Axial needle collar	Cage à aiguilles axiale	Gabbia assiale a rullini	057103
44 Sicherungsring	Locking ring	Circlip	Anello di sicurezza	059012
45 Sicherungsring	Locking ring	Circlip	Anello di sicurezza	059060
46 Stirnrad	Wheel	Roue droite	Ruota dentata cilindrica	542010 R220
47 Sicherungsscheibe	Locking washer	Rondelle de sécurité	Ranella di sicurezza	059053
50 Blechschraube	Sheet metal screw	Vis à tôle	Vite da lamiera	083073
51 Rillenkugellager	Grooved ball bearing	Roulement à billes	Cuscinetto a sfere	057004
52 Lüfter	Ventilator	Ventilateur	Ventilatore	535007
— Anker mit Lüfter 230 V	Rotor with ventilator 230 V	Induit avec ventilateur 230 V	Indotto con ventilatore 230 V	
Pos. 52 und 53	Pos. 52 and 53	Pos. 52 et 53	Pos. 52 e 53	585006 R220
— Anker mit Lüfter 110 V	Rotor with ventilator 110 V	Induit avec ventilateur 110 V	Indotto con ventilatore 110 V	
Pos. 52 und 53	Pos. 52 and 53	Pos. 52 et 53	Pos. 52 e 53	585006 R 110
54 Rillenkugellager	Grooved ball bearing	Roulement à billes	Cuscinetto a sfere	057061
55 Dämmring	Insulating ring	Anneau isolant	Anello isolante	570504
56 Lüfterabdeckung	Ventilator cover	Couvercle du ventilateur	Copertura di ventilatore	565409 R
57 Stator 230 V	Stator 230 V	Stator 230 V	Statore 230 V	585005 R220
Stator 110 V	Stator 110 V	Stator 110 V	Statore 110 V	585005 R 110
58 Blechschraube	Sheet metal screw	Vis à tôle	Vite da lamiera	083087
59 Kohlebüste (Paar)	Carbon brush (pair)	Balais de charbon (paire)	Carboncini (paio)	535021 R
— Gehäuse kompl.	Housing compl.	Carcasse compl.	Carcassa compl.	
Pos. 60–69	Pos. 60–69	Pos. 60–69	Pos. 60–69	535025 R
— Isolierring kompl.	Insulating ring compl.	Bague isolante compl.	Anello di isolamento compl.	
Pos. 61, 62, 63, 65	Pos. 61, 62, 63, 65	Pos. 61, 62, 63, 65	Pos. 61, 62, 63, 65	535016
64 Schraube	Screw	Vis	Vite	535010
66 Buchse	Bush	Douille	Boccola	535012
67 Druckfeder	Pressure spring	Ressort de compression	Molla di compressione	535013
68 Kontaktstift	Contact pin	Fiche de contact	Spina di contatto	535011
69 Abdeckung	Cover	Couvercle	Coperchio	535003 R
70 Abdeckring	Sealing ring	Bague-couvercle	Anello di copertura	535009 R
71 Stahlkugel	Steel ball	Bille d'acier	Sfera di acciaio	057062
72 Druckfeder	Pressure spring	Ressort de compression	Molla di compressione	535015
73 Stellring	Adjusting ring	Bague d'inversion	Commutatore di rotazione	535004 R
74 Distanzhülse	Distance sleeve	Entretroise	Boccola distanziatrice	535014
75 Griff	Handle	Poignée	Impugnatura	565027
76 Blechschraube	Sheet metal screw	Vis à tôle	Vite da lamiera	083066
77 Kondensator	Capacitor	Condensateur	Condensatore	027006
78 Biegeschutz	Rubber sleeve	Douille en caoutchouc	Manicotto di protezione	032057
79 Schaltlitze	Reversing strand	Câble comple	Cavetto	535022
80 Schalter 230 V	Switch 230 V	Interrupteur 230 V	Interruttore 230 V	023102 R220
Schalter 110 V	Switch 110 V	Interrupteur 110 V	Interruttore 110 V	023102 R 110
81 Bride	Strap	Bride	Linguetta	163130
82 Blechschraube	Sheet metal screw	Vis à tôle	Vite da lamiera	083063
83 Anschlußleitung 230 V	Connecting cable 230 V	Raccordement 230 V	Cavo d'allacciamento 230 V	535037 R220
Anschlußleitung 110 V	Connecting cable 110 V	Raccordement 110 V	Cavo d'allacciamento 110 V	535037 R 110
Anschlußleitung CH	Connecting cable CH	Raccordement CH	Cavo d'allacciamento CH	535037 R SEV
84 Griffdeckel	Handle cover	Couvercle de poignée	Coperchio d'impugnatura	585028
85 Blechschraube	Sheet metal screw	Vis à tôle	Vite da lamiera	083187
87 O-Ring	O-ring	Joint torique	Guarnizione O-Ring	060175
88 Einsatz	Insert	Insertion	Inserto	586006
89 Einlage	Insert	Insertion	Inserto	586005
— Stahlblechkasten	Steel case	Coffret métallique	Cassetta metallica	
Pos. 88, 89, 90	Pos. 88, 89, 90	Pos. 88, 89, 90	Pos. 88, 89, 90	586000 R
Getriebefett 0,5 kg	Gear flow grease 0,5 kg	Graisse à engrenages 0,5 kg	Grasso ingranaggi 0,5 kg	091002 R 0,5
— Zange für Sicherungsring	Pliers for locking ring	Pince pour circlip	Pinza per anello di sicurezza	582053
— Motor kompl. 110 V	Motor compl. 110 V	Moteur compl. 110 V	Motore compl. 110 V	585000 R110
Motor kompl. 230 V	Motor compl. 230 V	Moteur compl. 230 V	Motore compl. 230 V	585000 R220
Motor kompl. CH	Motor compl. CH	Moteur compl. CH	Motore compl. CH	585000 RSEV